

BLANCO



Performance First

Instructions for the Use and Care and Installation of

BIC63

BIC64

BIC84

Induction Cooktops.

Dear Customer

You will find that the clean lines and modern look of your Blanco cooktop blends in perfectly with your kitchen décor. It is easy to use and performs to a high standard.

Blanco also makes a range of products that will enhance your kitchen – such as ovens, rangehoods, dishwashers, microwaves, sinks and taps. There are models to complement your new Blanco cooktop. Blanco now has a range of laundry products to choose from.

Of course, we make every effort to ensure that our products meet all your requirements, and our Customer Relations Department is at your disposal, to answer all your questions and to listen to all your suggestions.

Please complete the warranty section of this manual and keep your receipt as proof of purchase. Retain all documents relating to the purchase of Blanco product.

Blanco is committed to providing increasingly efficient products that are easy to use, respect the environment and are attractive and reliable.

BLANCO

As part of our commitment to constantly improving our products, we reserve the right to make changes to them based on technological advances to their technical, functional and/or aesthetic properties.



Attention

Before installing and using your appliance, please carefully read this Guide to Installation and Use, which will allow you to quickly familiarise yourself with its operation.

- Safety Guidelines _____ 4
- Disposing of Waste _____ 4
- Description of Your Appliance _____ 6
- Proper positioning _____ 6

- 1 / INSTALLING YOUR APPLIANCE**
- Building in _____ 7
- Hook-up _____ 8

- 2 / USING YOUR APPLIANCE**
- Description of the top _____ 9
- Cookware for induction _____ 10
- Which cooking zone should you use based on your cookware? _____ 10
- Description of control panel _____ 11
- Powering on _____ 11
- Stop _____ 11
- Adjusting the power _____ 11
- Keypad beep _____ 11
- Bringing upto temperatur quickly _____ 11
- Setting the timers _____ 12
- Using the "child safety device" _____ 12
- Safeties during operation _____ 13

- 3 / DAILY CARE OF YOUR APPLIANCE**
- Protecting your appliance _____ 14
- Maintaining your appliance _____ 14

- 4 / SPECIAL MESSAGES, DIFFICULTIES**
- During initial use _____ 15
- When powering on _____ 15
- During operation _____ 15

- 5 / COOKING CHART**
- Cooking chart for food types _____ 16

- BLANCO CONTACT INFORMATION _____ 18
- WARRANTY _____ 19

• SAFETY GUIDELINES

We have designed this cooking hob for use by private persons in their homes.

These cooking hobs are meant to be used exclusively for cooking beverages and foodstuffs and do not contain any asbestos-based materials.

• **Residual heat**

A cooking zone can remain hot for several minutes after use.

An "H" is displayed during this period.

Avoid touching the hot areas during this time.

• **Child safety device**

Your hob is equipped with a child safety device that locks its operation after use or during cooking (See "Using the Child Safety Device" section).

Do not forget to unlock it before using the hob again.

• **For users of pacemakers and active implants**

The functioning of the hob conforms to current electromagnetic interference standards and thus is in total compliance with legal requirements (89/336/CEE directives).

In order to avoid interference between your cooking hob and a pacemaker, your pacemaker must be designed and programmed in compliance with the regulations that apply to it.

Consequently, we can only guarantee that our own product is compliant.

With regard to the compliance of the pacemaker or any potential incompatibility, you can obtain information from the manufacturer or your attending physician.



Electrical Danger

Ensure that the power cables of any electrical appliances plugged in close to the hob are not in contact with the cooking zones.

If a crack appears in the glass worktop, immediately disconnect your appliance to avoid the risk of electric shock.

To do this, remove the fuses or use the circuit breaker.

Do not use your hob until you have replaced the glass worktop.

• DISPOSING OF WASTE



This appliance's packaging material is recyclable. Help recycle it and protect the environment by dropping it off in the municipal receptacles provided for this purpose.

Your appliance also contains a great amount of recyclable material. It is marked with this label to indicate the used appliances that should not be mixed with other waste. When disposing of your appliance contact your local council in relation to disposal locations.


We thank you doing your part to protect the environment.

- Read the following carefully to avoid an electric shock or fire.
- It is most important that this instruction book should be retained with the appliance for future reference.
- Should the appliance be sold or transferred, always ensure that the book is left with the appliance in order that the new owner can get to know the functions of the appliance and the relevant warnings.
- These warnings are provided in the interest of safety. You **MUST** read them carefully before installing or using the appliance.
- All operations related to electrical wiring and installation must be carried out by qualified persons, in accordance with safety regulations.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
- Young children should be supervised to ensure that they do not play with the appliance.


WARNING : If the surface is cracked, switch off the appliance to avoid the possibility of an electric shock.

- Do not use a steam cleaner to clean this appliance.
- Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.
- Do not spray aerosols in the vicinity of the appliance when it is in operation.
- Do not store or use flammable liquids or items in the vicinity of this appliance, e.g. aerosols.
- **WARNING:** Accessible parts will become hot when in use. To avoid burns and scalds children should be kept away.
- Do not allow large cookware to overhang the hob onto the adjacent benchtop. This will cause scorching to the benchtop surface.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified person in order to avoid a hazard.

• DESCRIPTION OF YOUR APPLIANCE

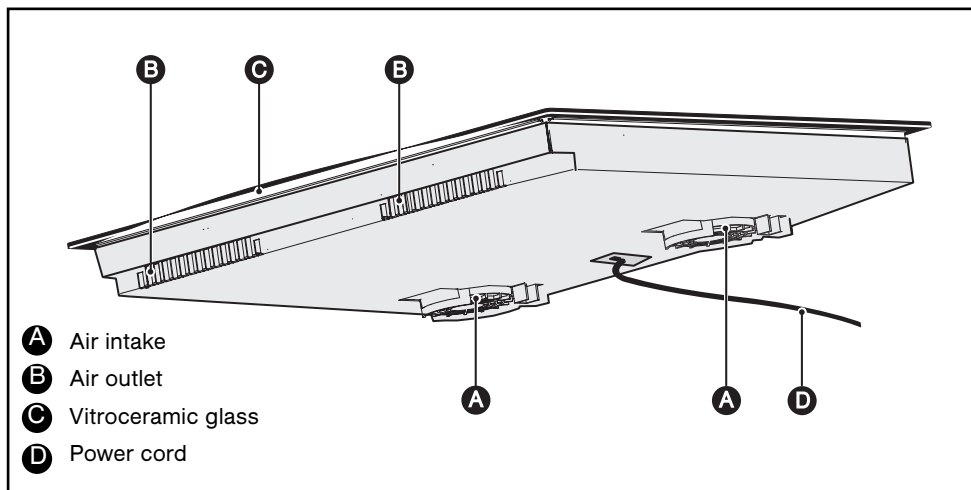

PROPER POSITIONING

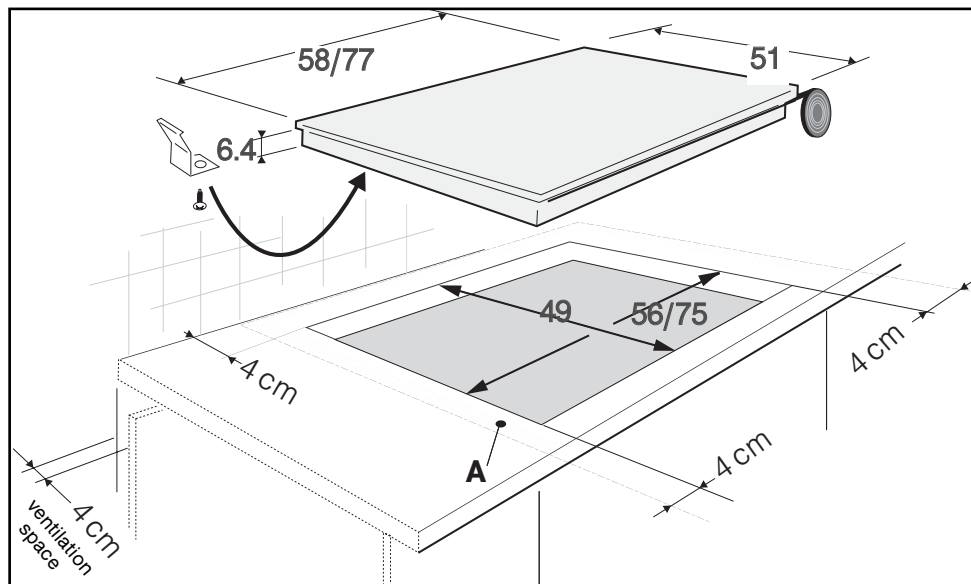

Your appliance should be positioned so that the plug-in unit is accessible.

The distance between the edge of your appliance and the side and rear walls (or partitions) must be at least four centimetres (area A).

Glue the foam seal underneath your appliance by following the outline of the worktop upon which your appliance will rest. This will allow you to achieve an airtight seal with the worktop.

Attach the clips to the hob (*depending on the model*)


• BUILD-IN

Your appliance can be easily integrated above a cabinet, an oven or a build-in-ready household appliance.

For all types of installation, your induction hob needs proper ventilation.


ABOVE A CUPBOARD OR DRAWER UNIT

The positioning must allow a fresh air intake and air outlet.

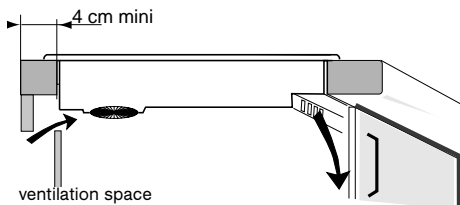

ABOVE AN OVEN

The positioning must allow a fresh air intake and an air outlet of 4 mm minimum

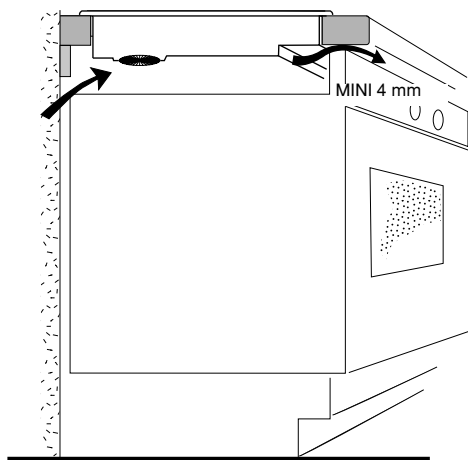

Tip

If your oven is located below your hob, the hob's thermal safety measures forbid the simultaneous use of the hob and the pyrolysis program of your oven.

Your hob is equipped with an anti-overheating safety device.

This safety can be activated, for example, when the hob is installed over an oven that is not sufficiently insulated. If this occurs, a series of small lines appear in the control panel. In this case, we recommend that you increase the ventilation of your hob by creating an opening in the side of your cabinet (8 cm x 5 cm)




Warning

You must ensure that the air intakes located under your cooking appliance remain clear at all times.

• HOOK-UP

• 220-240 V monophase hook-up


32-amp fuse.

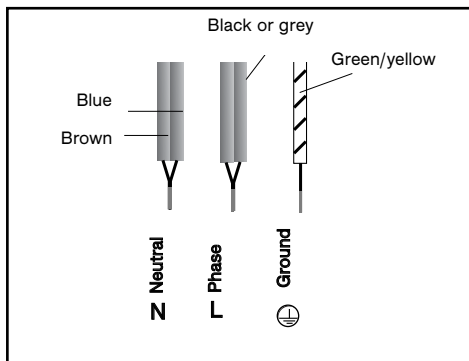

• 400 V 2N triphase hook-up

16-amp fuse.

Separate the two phase wires (L1 and L2) before hooking up.

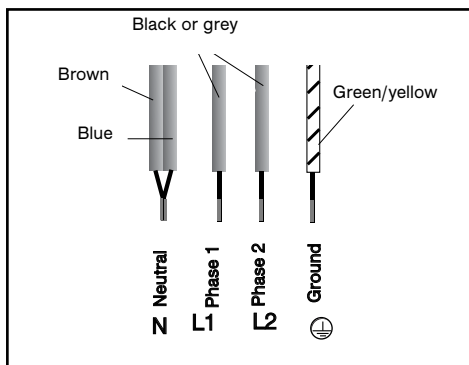

For a 400 V 2N triphase hook-up, if your hob malfunctions, check that the neutral conductor is properly connected.

These hobs must be connected to the power grid via an electrical outlet that complies with EIC publication 60083 or an all-pole cut-off device that complies with installation regulations in effect.


When power is first supplied to your hob, or after an extended power outage, an indicator light will appear on the control panel. It automatically disappears after approximately 30 seconds, or as soon as any touch control on the control panel is pressed. This display is normal and, if needed, serves as an indication to the after-sales service staff. In all cases, the user of the hob should disregard it.




Warning

If the power cable is damaged, it should be replaced by the manufacturer, its after-sales service department or by a person with similar qualifications to avoid danger.


• DESCRIPTION OF THE TOP

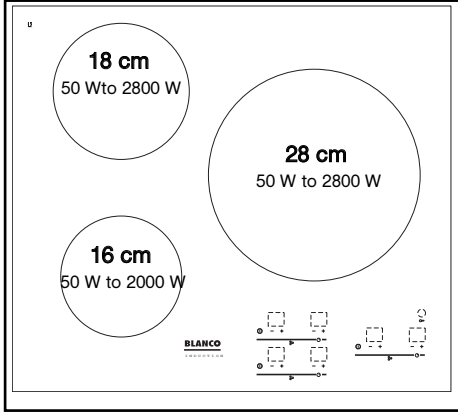

BIC63

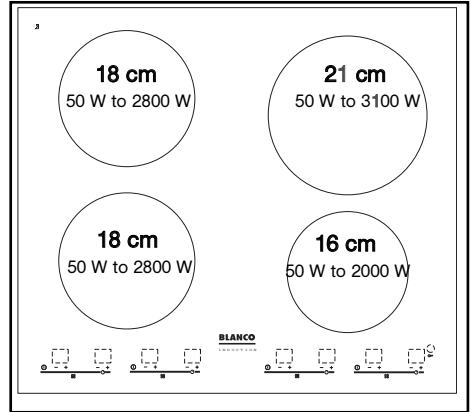


BIC64

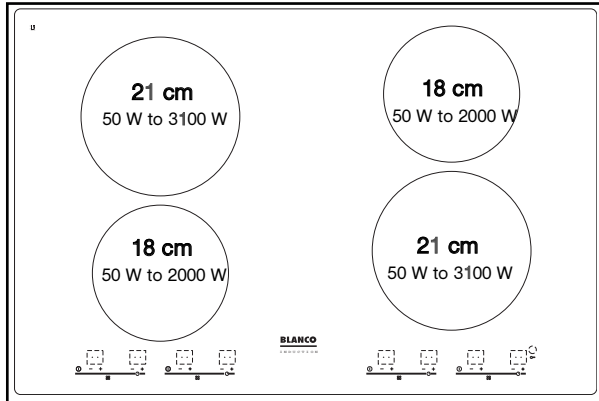

BIC84

• COOKWARE FOR INDUCTION

• The induction principle

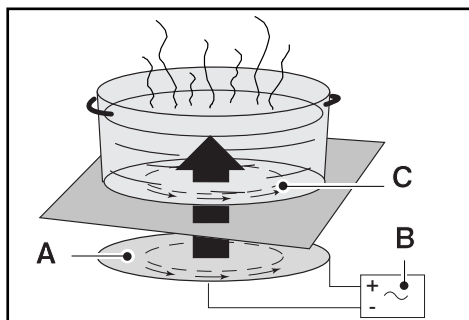

- A** Inductor
- B** Electronic board
- C** Induced electric current

The principle of induction is based on a magnetic phenomenon.

When you place your cookware on a cooking zone and you turn it on, the electronic boards in your cooking hob produce "induced" currents in the bottom of the cookware and instantly raise its temperature. This heat is then transferred to the food, which is simmered or seared depending on your settings.

• Cookware

Most cookware is compatible with induction. Only glass, terra cotta, aluminium without a special finish on the bottom, copper and some non-magnetic stainless steels do not work with induction cooking.

We recommend that you select cookware with a thick, flat bottom. The heat will be distributed better and cooking will be more uniform.



By choosing cookware that displays this logo on its bottom or on its packaging, you can be certain that it is perfectly compatible with your hob under normal operating conditions. To help you choose, a list of cookware is provided with this guide.

• WHICH COOKING ZONE SHOULD YOU USE BASED ON YOUR COOKWARE?

Cooking zone	Cookware to use
16 cm	10 18 cm
18 cm	12 22 cm
21 cm	18 24 cm
28 cm	12 32 cm



Tip

To check the suitability of your cookware:

Place the vessel on a cooking zone at power level 4.


If the display remains on, your cookware is compatible.

If the display flashes, your cookware cannot be used with induction cooking.

You can also use a magnet to test the cookware.

If a magnet "sticks" to the bottom of the cookware, it is compatible with induction.

• DESCRIPTION OF THE CONTROL PANEL

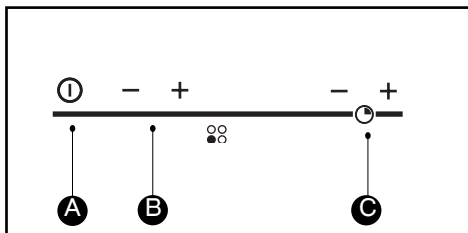

- A** Start/stop touch control.
- B** Power - + touch controls.
- C** Timer - + touch controls.

• POWERING ON

Press the start/stop button for the cooking zone you want to use. A flashing 0 and a beep indicate that the cooking zone is on. You can then choose the desired power level.

If you do not select a power level, the cooking zone will automatically turn itself off.

• STOP

Press the start/stop button for the cooking zone used or the power "-" button until 0 is displayed.

• ADJUSTING THE POWER

Press the + or - power button to adjust the power level from 1 to P (maximum power). When it is switched on you can move directly to maximum power "P" by pressing the "-" button.



 
Tip

For simultaneous use, favour the use of cooking zones located on opposite sides of the hob.

On the same side, the use of a cooking zone at maximum power results in an automatic limitation of the other cooking zone on that side, which is indicated in the power level display.

• KEYPAD BEEP

The beep of "+" and "-" keys may be turned on or turned off when the hob isn't in use.



- To turn off the beep keep simultaneously the "+" power button and the + timer button pressed on the right front cooking zone keypad until the display "bEEp" disappears on the display.

- To turn on the beep keep simultaneously the "+" power button and the + timer button pressed on the right front cooking zone keypad until the display "bEEp" appears on the display.

BRINGING UP TO TEMPERATURE QUICKLY

This function can be used to go to the cooking temperature you want, quickly.

To use press "-" button "P" will indicate. Push "+" button, "P." will indicate. Push "-" button to set the cooking power you require. After a few seconds "P." displays again confirming that you are in "bring up to temperature quickly" mode.

After a few moments, the hob displays the cooking power; the quick increase phase has finished, you are in conventional cooking mode and you can then change the settings.

WARNING

- Having pressed "P." if you are not adjusting a cooking power, the cooking zone will automatically turn itself off.

- When the display shows "P." pressing the power buttons will cancel the "quick temperature increase" and you will return to conventional power setting mode.

• **SETTING THE TIMER**

The timer functions when the cooking zone in question is in use.

To switch it on, press the "+" button on the timer (to set 1,2,3,...min.) or "-" (to set from 99,98,97,...min).

To change this, press - or + to increase or decrease the time.

To stop the timer manually, keep simultaneously pressed "+" and "-" or return to 0 using the "-" button.

When cooking is finished, the display shows 0 and a **beep** sounds; to stop this happening, press any control button for the cooking zone in question.

 
Otherwise, these will automatically turn themselves off after about 1 minute.

The timer only operates if there is something on the cooking zone.

Note !

At the 1 minute interval the timer counts down at 1 second interval.

• **USING THE "CHILD SAFETY DEVICE"**



Your cooking hob is equipped with a child safety device that locks its operation after use (e.g. so the hob can be cleaned) or during cooking (e.g. to guard

your settings).



For safety reasons, the "off" touch control is always active and allows you to shut off a heating zone, even if it is locked.



• **How do you lock the hob?**

Keep the lock button pressed until the LED above lights up and a "BIP" is heard .



- hob locked in use

the led above the key lights up

The symbol   is displayed when you press power or timer buttons on the cooking zone in use .

The symbol   is displayed when you press on ON/OFF button on a unused cooking zone.

- unused hob locked

The symbol   is displayed when you press on ON/OFF button on a unused cooking zone.

• **How do you unlock?**

Press the lock button until the LED goes out and double beep is heard.



Warning

Remember to unlock your hob before using it again (See the "Using the Child Safety Device" section).

• SAFETY DURING OPERATION

• **Residual heat**

After intensive use, the cooking zone that you have just used can remain hot for several minutes.

An "H" is displayed during this period.

Avoid touching the hot areas during this time.

• **Temperature limiter**

Each cooking zone is equipped with a safety sensor that constantly monitors the temperature of the bottom of the cookware. In the event that an empty vessel is left on a cooking zone that is on, this sensor automatically adjusts the power output of the hob, thereby avoiding any risk of damage to the cookware or the hob.

• **"Small Items" safety**

A small object (such as a fork, a spoon, a ring, etc.) left alone on the hob is not detected as a piece of cookware.


The display flashes and no heat is produced.



Warning

Several small objects together on a cooking zone may be detected as cookware. If the display remains on: power may be supplied and the objects may be heated.

• **Protection against overflows**

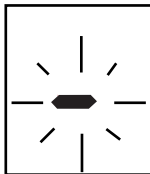

The hob may shut down (with the adjacent symbol in the display) automatically in any of these three situations:

- Overflow that spills onto the touch controls.
- Damp towel placed over the touch controls.
- Metallic object placed on the touch controls.

Clean the hob or remove the object, then begin cooking again.

• **Auto-Stop system**

If you forget to switch off a cooking zone, your hob has an "Auto-Stop system" safety function which automatically cuts off the power to the cooking zone, after a predefined period (between 1 and 10 hours depending on the power used).

If this safety system is used, the cutoff to the cooking zone is displayed as "AS" or "A" on the control panel and a "beep" sounds for about 2 minutes. Simply press any of the control buttons to stop this.

A double beep will confirm your action.

• PROTECTING YOUR APPLIANCE

Avoid hard shocks from cookware:

The vitroceramic glass worktop is very sturdy; however, it is not unbreakable.

Do not place any hot lids flat on your cooking hob. A suction effect may damage the vitroceramic surface.

Avoid dragging cookware across the surface, which may in the long-term result in the degradation of the decorative finish of the vitroceramic top.

Avoid placing cookware on the frame or cover (depending on the model).

Avoid using cookware with rough or bumpy bottoms: they can capture and transfer particles that may produce stains or scratches on your hob.

These defects that do not result in appliance malfunction or do not make it unsuitable for use are not covered by the warranty.

• MAINTAINING YOUR APPLIANCE

Do not store cleaning products or flammable products in the cabinet underneath your cooking hob.

Do not heat unopened canned goods; they may burst.

Of course, this precaution applies to all types of cooking.

Never use a sheet of aluminium for cooking. Never place items wrapped in aluminium foil or packaged in aluminium dishes on your cooking hob.

The aluminium will melt and permanently damage your cooking appliance.

Objects not intended for cooking should never be placed on the hob (risk of powering on, scratches, etc.).

Steam cleaning should never be used. The steam jet could damage your hob.

TYPE OF STAINS/SPOTS	USE	WHAT TO DO
Light.	Disinfectant sponges.	Thoroughly moisten the zone to be cleaned with hot water, then wipe off.
Accumulation of baked-on soil. Overflow of sugary preparations, melted plastic.	Disinfectant sponges. Scraper for glass.	Thoroughly moisten the zone to be cleaned with hot water. Use a scraper for glass to remove the large bits, follow with the rough side of a disinfectant sponge, and then wipe off.
Rings and hard water residue.	White spirit vinegar.	Apply warm white vinegar to the stain, let stand, then wipe with a soft cloth.
Shiny metallic streaks. Weekly maintenance.	Cleaning agent for vitroceramic glass.	Apply a cleaning agent for vitroceramic glass (preferable one with silicone for its protective properties) to the surface.



Cream



Special disinfectant sponge
for delicate dishes



Powder




Scouring sponge


 
• During initial use

YOU OBSERVE THAT:	POSSIBLE CAUSES:	WHAT SHOULD YOU DO:
An indicator light appears.	Working normally.	Nothing.
Your installation blows a fuse.	The electrical hook-up of your hob is incorrect.	Verify the connections. See the "Hook-Up" section.
Only one side works.		
The hob produces an odour during the first cooking sessions.	New appliance.	Operate each cooking zone for 30 minutes with a saucepan full of water.

• When powering on

YOU OBSERVE THAT:	POSSIBLE CAUSES:	WHAT SHOULD YOU DO:
The hob is not working and the indicator lights on the control panel are not on.	The appliance is not receiving electricity. The electrical supply is defective or the hook-up is incorrect.	Inspect the electrical circuit breaker and fuses.
The table is not working and another message is displayed.	The electronic board is functioning poorly.	Call the After-Sales Service Department.
The hob does not function, the information  is displayed.	The hob is locked.	See chapter on using the child safety system.

• During operation

YOU OBSERVE THAT:	POSSIBLE CAUSES:	WHAT SHOULD YOU DO:
The hob stops working and it emits a beep approximately every 10 seconds and a  or "F7" is displayed.	There was an overflow or an object is in contact with the control panel.	Clean the hob or remove the object, then begin cooking again.
A series of small  or "F7" is displayed.	The electronic boards heated up.	See "Built-In" section.
After turning on a heating zone, the indicator lights on the control panel continue to flash.	The cookware used is not suitable for induction or is less than 12 cm in diameter (10 cm for the 16-cm cooking zone).	See section on cookware for induction.
The saucepans make noise during cooking. Your hob makes a clicking sound during cooking.	This is normal with some types of cookware. This is caused by the transfer of energy from the hob to the cookware.	Nothing. There is no risk, neither to your hob nor to your cookware.
The fan continues to function a few minutes after your hob is turned off.	Cooling of the electronic components. Working normally.	Nothing.



Warning

In the event that there is a break, crack or opening—even minor—in the vitroc ceramic glass, immediately disconnect your appliance to avoid the risk of electric shock. Contact the After-Sales Service Department.

• COOKING CHART

		FRY BRING TO A BOIL	COOK/BROWN RETURN TO BOILING BOILING LIGHT BROTHS				COOK/SIMMER				KEEP WARM		
		P	11	10	9	8	7	6	5	4	3	2	1
SOUPS	BROTHS								●				
	THICK SOUPS											●	
FISH	COURT BOUILLON					●							
	FROZEN FOODS							●					
SAUCE	THICK, FLOUR-BASED								●				
	BUTTER-BASED WITH EGGS (BEARNAISE, HOLLANDAISE)								●				
	PREPARED SAUCES	P	11	10	9	8	7	6	5	4	3	2	1
VEGETABLES	ENDIVES, SPINACH											●	
	DRIED BEANS											●	
	BOILED POTATOES							●					
	GOLDEN BROWN POTATOES							●					
	SAUTEED POTATOES							●					
	DEFROSTING VEGETABLES											●	
MEAT	MEAT, NOT TOO THICK					●							
	STEAKS, IN SKILLET					●							
	GRILLED MEATS (CAST IRON GRILL)					●							
FRYING	FROZEN FRENCH FRIES	●											
	FRESH FRENCH FRIES	●											
		P	11	10	9	8	7	6	5	4	3	2	1
MISCELLANEOUS	PRESSURE COOKER (ONCE IT STARTS WHISTLING)								●				
	COMPOTES							●					
	CRÊPES					●							
	CRÈME ANGLAISE			●									
	MELTED CHOCOLATE												●
	JAMS							●					
	MILK			●									
	EGGS, FRIED					●							
	PASTA					●							
	JARS OF BABY FOOD (DOUBLE BOILER)							●					
	MEAT STEW			●									
	SPANISH RICE											●	
	RICE PUDDING											●	